
Coolingmist CB Stage 1 kit instructions

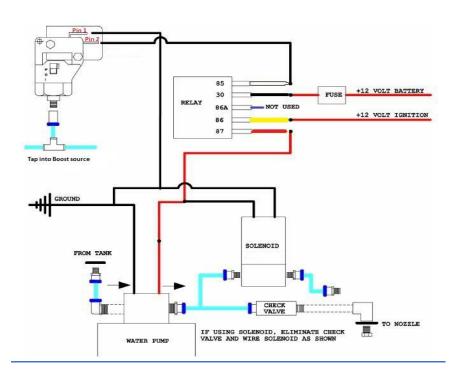

Connection to Pressure Switch

- Pin 1 using Black wire goes to chassis ground (be sure to get a metal on metal connection,).
- Pin 2 of the pressure switch goes to pin 85 on the relay. This is the white wire.
- Find an accessible boost line and cut it in 1/2. We supplied a tee for ¼" hose. Your vacuum lines maybe another size, if so will need to supply your own tee. These can be purchased at any local hardware store.

Electrical connection to Relay *Refer to pin number not colour

- Pin 85 connects to pin 2 on the pressure switch.
- Pin 86 connects to the ignition 12v source in your vehicle
- Pin 87 connects to the Pumps Red wire.
- Pin 30 connects to the fused +12v source of the battery.
- Pin 87a connects to nothing.

Solenoid

Attach the one wire directly to a chassis ground and connect the other wire to the pumps red wire. Cut your tubing and place it inline as close as possible to the nozzle.

Self Sealing Float Switch (optional)

On the side of the tank, drill a 7/8" hole a minimum of 1" from the bottom of tank. Place the self sealing float switch inside the opening. Tighten slightly past hand tight. **Do not over tighten**. Note the 2 wires coming out of the switch. Take one wire and run it directly to ground. Take the other wire and hook up to the ground of an LED.

<u>Important:</u> When system is activated, if something doesn't feel or sound right, BACK OFF! If you hear any detonation or feel anything unusual; get off the throttle. It is substantially easier to stop and check everything over than it is to just try to drive through it and damage expensive parts.