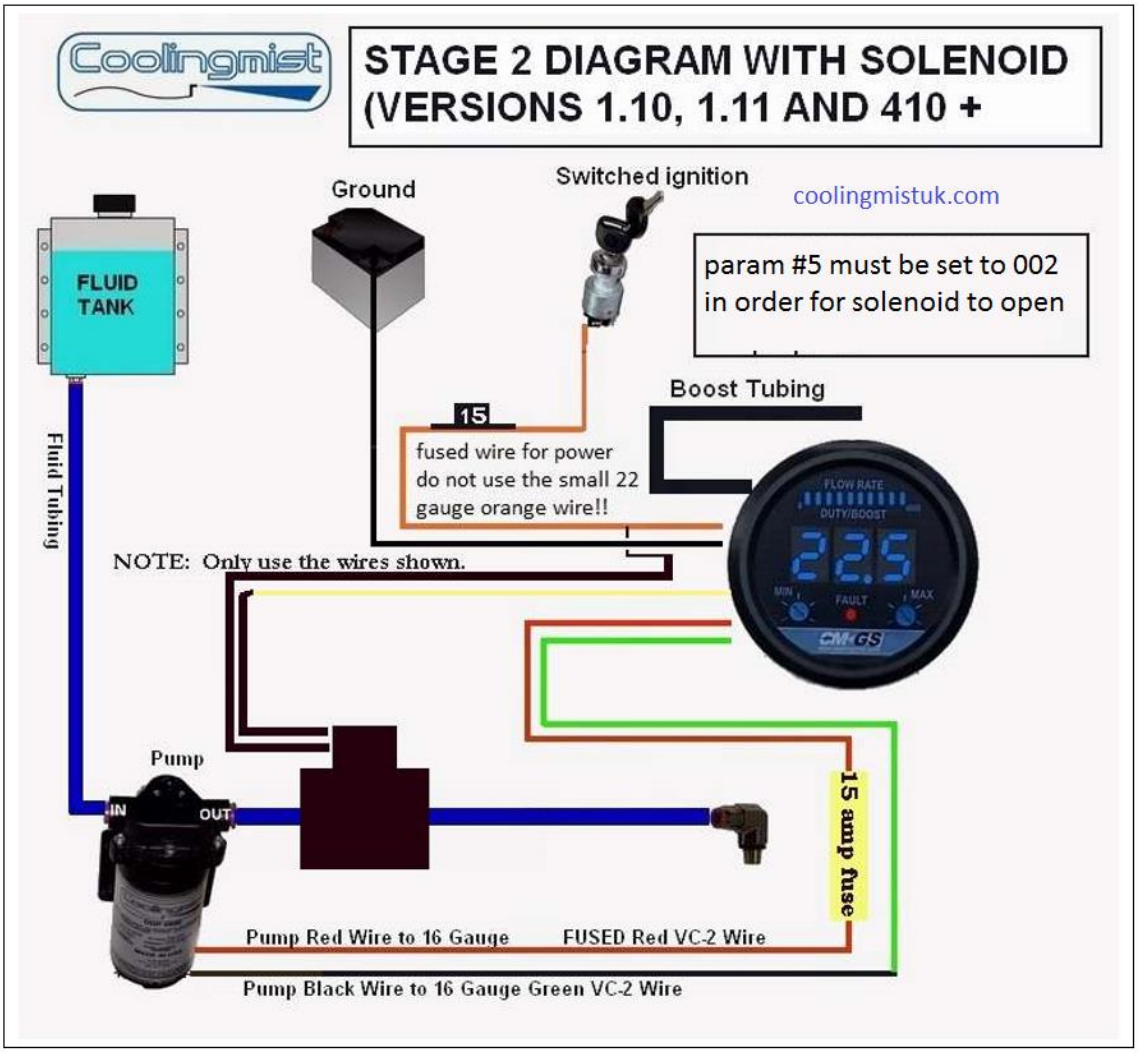
Coolingmist
STAGE 2 DIAGRAM WITH SOLENOID
(VERSIONS 1.10, 1.11 AND 410 +
Ground
Switched ignition
coolingmistuk.com
param #5 must be set to 002
in order for solenoid to open
FLUID
TANK
Boost Tubing
15
fused wire for power
do not use the small 22
gauge orange wire!!
Fluid Tubing
NOTE: Only use the wires shown.
FLOW RATE
DUTY/BOOST
22.5
MIN
FAULT
MAX
CM-GS
Pump
IN
OUT
15 amp fuse
Pump Red Wire to 16 Gauge
FUSED Red VC-2 Wire
Pump Black Wire to 16 Gauge Green VC-2 Wire